

Petrol Powered 275 scabber / floor planer

Weight(kg)	Height(mm)	Width(mm)	Length(m)	Hand arm vibration	Noise(db)
170	1130	360	900	5.6	90



EACH TIME BEFORE USING MACHINE

This machine should only ever be used by a trained and competent person.

Upon acceptance, please check the machine has in no way been damaged in transit and works, and each time prior to use. If you have any questions or doubts, please contact us, also in the event of breakdown or damages

Please check that all safety mechanisms and switches are intact and working correctly.

Please make sure that the floor you're about to prep is clear of all foreign objects that could cause damage to the machine or operator. This must be completed every time before using the machine.

Please check every day that all belts, bearings and moving parts are in good condition because this could lead to breakage and even injury.

USING THE MACHINE

Please check fuel and oil levels before attempting to start the machine, and then daily. To start the machine, make sure the drum is fully raised to the top by winding the adjustment wheel anti-clockwise. To start the engine turn the start button to ON at the front of the engine. Then at the side of the machine, slide the choke lever \geq to on and the same for the fuel lever. Stand in front of the machine, placing your foot at the front of it to steady it, and firmly pull the pull chord. If the engine does not fire up, try the pull chord again but with more force. If after 2 – 3 attempts it still does not fire up, try decreasing the choke. Once the engine does fire up, slide the choke to off.

Turn the adjustment wheel clockwise to slowly lower the drum down onto the floor. To switch the engine off press the 0 button at the front of the engine.

These machines should never plane more than 1 mm on a pass, depending on the product being removed. If a deeper cut is desired, use multiple passes in a criss-cross pattern. Cutting deeper than the recommended limits is likely to result in long down times and an expensive repair or replacement of the drum.

AFTER USING AND PRIOR TO RETURNING THE MACHINE

Please switch the fuel lever to off and wind the drum wheel up off the floor. If the planer is to be collected by a pallet company, please drain the fuel tank beforehand.

An off-hire will never be arranged at the beginning of the hire period. Please call the office and arrange collection as soon as you know when the machine/machines will no longer be required.

Please make sure the machine is returned in a fit and clean state to avoid charges.

If multiple machines are being collected, please have them placed neatly together, ready to collect because time may be charged if we have to search or wait for equipment. Items not available for collection will remain on hire and additional collection charges will apply.

If the machine is to be collected by a carrier, please ensure it's strapped securely to the pallet using the straps that it arrived with and is left somewhere obvious and preferably arrange for someone to be responsible for supervising the collection. The petrol planer's fuel tank must be emptied beforehand.

All information above is provided for guideline purposes only. For more accurate and reliable information please refer to the manufacturer.

Multi-Hire Power Tools

Warrington

www.multi-hire.co.uk

0345 5613 633