

250/275 scabblers / floor planers

Weight(kg)	Height(mm)	Width(mm)	Length(m)	Hand arm vibration	Noise(db)
170	1130	360	900	5.6	90



EACH TIME BEFORE USING MACHINE

This machine should only ever be used by a trained and competent person.

Upon acceptance, please check the machine has in no way been damaged in transit and works, and each time prior to use. If you have any questions or doubts, please contact us, also in the event of breakdown or damages

Please check that all safety mechanisms and switches are intact and working correctly.

Please make sure that the floor you're about to prep is clear of all foreign objects that could cause damage to the machine or operator. This must be completed every time before using the machine.

Please check every day that all belts, bearings and moving parts are in good condition because this could lead to breakage and even injury.

USING THE MACHINE

To start the machine, make sure the drum is fully raised to the top by winding the adjustment wheel anti-clockwise. On the 3 phase electric planer make sure the 'dead man's switch' is properly inserted into the slot and attach the chord around your wrist. Press the start button and the drum should start spinning. Turn the adjustment clockwise to slowly lower the drum down onto the floor. Press the 0 button to stop the machine. Do not use the emergency stop button, except in a genuine emergency.

The petrol planer starts by switching the on/off switch to No. 1. Make sure that the fuel and choke levers are slid in the direction of the arrows and the accelerator is on its lowest setting. Pull the recoil rope and the engine should fire up. Immediately slide the choke lever to off. Turn the adjustment wheel clockwise to slowly lower the drum down onto the floor. Press the 0 button to stop the machine.

These machines should never plane more than 1 mm on a pass, depending on the product being removed. If a deeper cut is desired, use multiple passes in a criss-cross pattern. Cutting deeper than the recommended limits is likely to result in long down times and an expensive repair or replacement of the drum.

AFTER USING AND PRIOR TO RETURNING THE MACHINE

Please ensure that the machine (electric) is unplugged and kept in a safe place.

An off-hire will never be arranged at the beginning of the hire period. Please call the office and arrange collection as soon as you know when the machine/machines will no longer be required.

Please make sure the machine is returned in a fit and clean state to avoid charges.

If multiple machines are being collected, please have them placed neatly together, ready to collect because time may be charged if we have to search or wait for equipment. Items not available for collection will remain on hire and additional collection charges will apply.

If the machine is to be collected by a carrier, please ensure it's strapped securely to the pallet using the straps that it arrived with and is left somewhere obvious and preferably arrange for someone to be responsible for supervising the collection. The petrol planer's fuel tank must be emptied beforehand.

All information above is provided for guideline purposes only. For more accurate and reliable information please refer to the manufacturer.

Multi-Hire Power Tools
Warrington
www.multi-hire.co.uk
01925 653633